

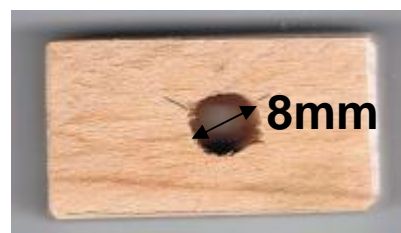
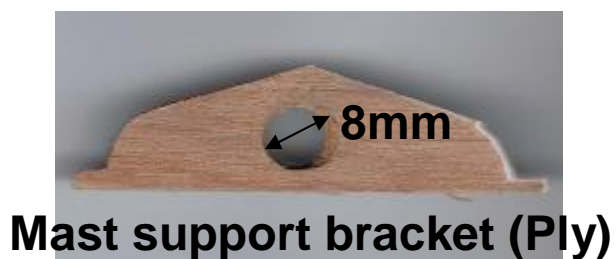
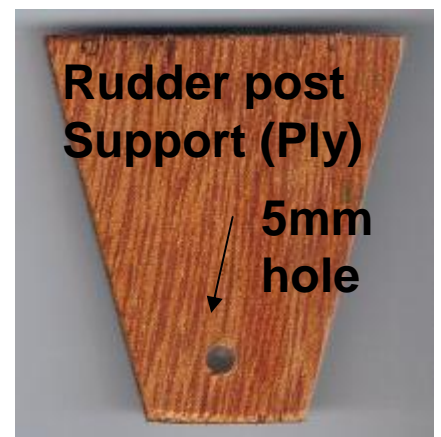


SMALL PIECES FOR HULL INTERNALS FULL SIZE

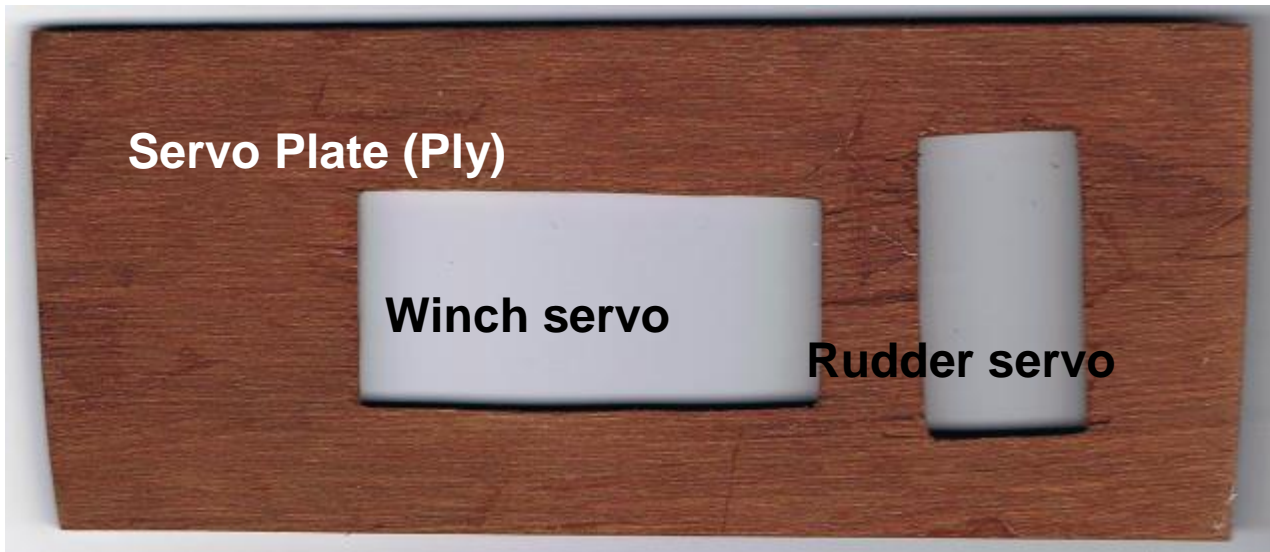


**Mast on hull
floor block
10mm thick pine.**

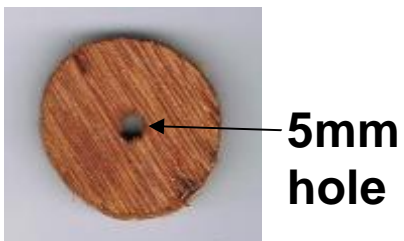

**Rudder tube on hull
floor disc (Ply).**

SMALL PIECES FOR HULL INTERNALS FULL SIZE

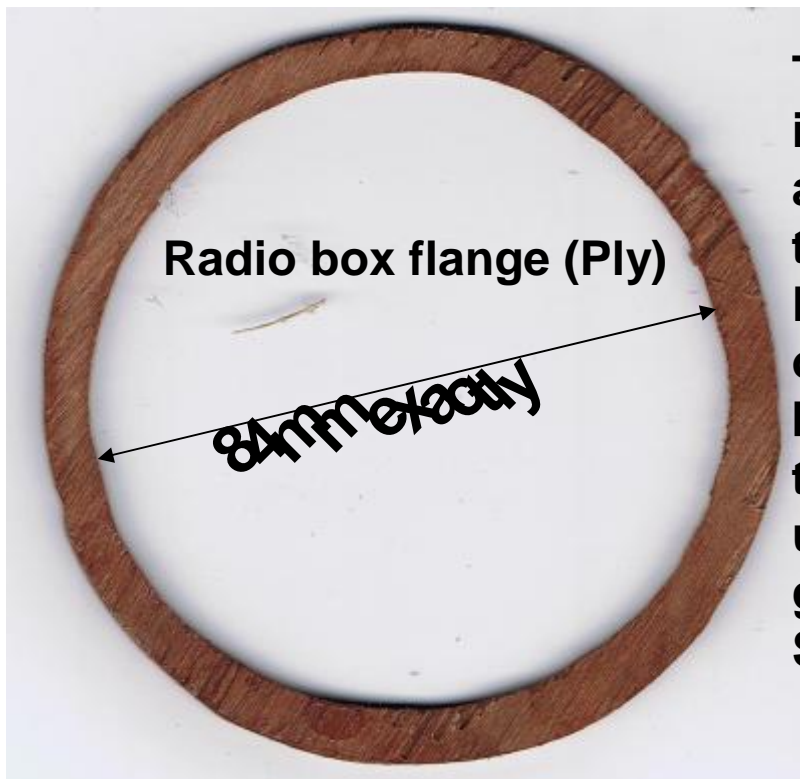

This ring is epoxied inside the deck over an exact 84mm hole in the deck. Prior to gluing the deck onto the hull the radio box is pushed through this ring from the underside and glued to the ring with Selleys 'All Clear'

Note: Some pill bottles have 3 triangular 'security tabs' located just below the thread – these are not suitable.



Radio box is made from a generic vitamin bottle cut down as above – the bottom is cut off just below the change in diameter so it fits inside the body of the bottle. The body is cut down to 60mm rim to bottom. The bottom is reglued into the body with Selleys 'All Clear'